



1. ACCLIMATE

- Remove flooring from boxes and store inside the project area. Keep stacks 3' high or less, ensuring flooring is stored flat.
- Allow material to acclimate to room conditions for a minimum of 48 hours.
- Room temperature should be kept between 65°F - 85°F.

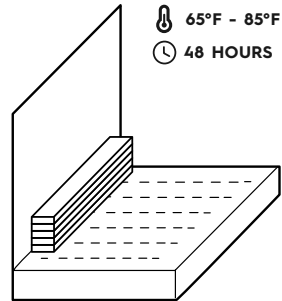


2. PREP

- Prepare subfloor to be dry, smooth, level, clean and dust-free

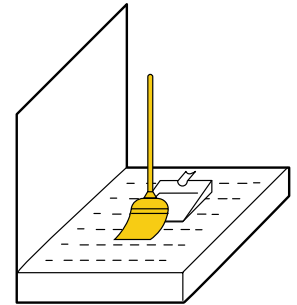


3. INSTALL


- Choose appropriate installation type depending on the size of the project and level of foot traffic.
- Recommended Adhesive: Bostik Lock A499 PSA

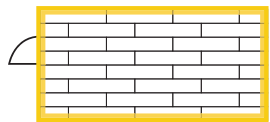

PERIMETER-ONLY
ADHESIVE

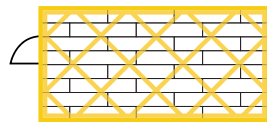


DIAMOND SHAPED
ADHESIVE

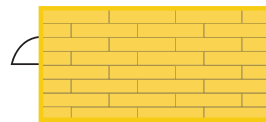

FULL SPREAD
ADHESIVE


4. APPLY ADHESIVE

- Apply adhesive per the manufacturer's instructions across the entire installation area in sections that are workable within the allowed open time.
- Spread a 4" band of adhesive or tape around the entire perimeter.

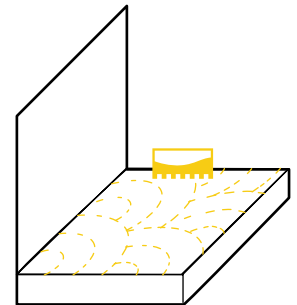


5. INSTALL PLANKS

- Work row by row ensuring to work out of multiple boxes.
- Inspect the rows to ensure they are tight without gaps or buckling.

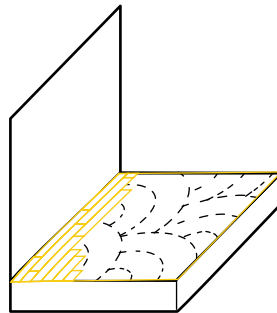

6. CURE

- Avoid direct sunlight while the adhesive or tape cures or a minimum of 72hrs post-installation, whichever is longer.

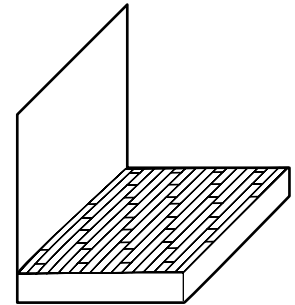

RECOMMENDED ADHESIVE

For Shires flooring installations, the recommended Bostik product is the Lock A499 PSA (Pressure Sensitive Adhesive).

